



## Kids Action Camera



## **Introduction**

Thank you for choosing Little Nation product. In order to better understand and use our kid's action camera recorder, we recommend you to read the instructions carefully before usage and keep them for future reference.

Little Nation action camera has high-definition specifications that are handy and beautifully designed for children. This is a perfect on-the-go gadget that kids can use to explore and capture their daily adventure. Let your kids create and experience a colorful childhood!

## Appearance





1	Up	7	Power Button
2	Mic	8	Micro SD card
3	Down	9	Micro USB Port
4	OK	10	Busy indicator light
5	Menu	11	Charge indicator light
6	Lens	12	LCD

## Function Introduction

There are 5 icons on the main interface.

Each icon corresponds to a different function: photo mode, video mode, playback mode, game mode and system settings. Using [Up button] [Down button] to select the function, and [OK button] to confirm the entry into the function screen.



### Photo Mode

1. Take photo: Short press [OK button]
2. Sticker: Short press [Up button]/[Down button] to change the frame of sticker.
3. Magic Mirror: Short press [Up button]/[Down button] to change the type of mirror.

4. digital zoom: Long press the [Up button]/  
[Down button] to change the digital zoom.



## **Video Mode**

Select the video icon to allow recording when there is a TF card. When there is no card, it prompts “No card”, and “Card Full” when the remaining memory of the card is insufficient.

1. Recording and Stop: Short press [OK button] and press again to stop.
2. Music and Filter: Short press [Up button]/  
[Down button] to select music and different filters.
3. Exit: Short press [Menu button] to exit video mode.



## Playback Mode

It will play the last photo or the first frame of video automatically.

1. File Select: Short press [Up button] / [Down button] to select files.
2. Video play: Short press [OK button] to play start or pause.
3. Delete: Long press [OK button] to select a file.



## Game Mode

1. Select game: Short press [Ok button] to start game.
2. Button:  
Left-----[Menu button]    Right-----[Ok button]  
Continue-----[Up button]    Exit-----[Down button]



## Setting Mode

1. Format: Erase all Data on the SD card
2. Version: Select “version icon”
3. Default settings: Reset settings of the camera to factory default.
4. Language setting: There are 16 languages for you to choose from.
5. Cyclic Recording: Short press [Up button]/[Down button] to choose open this function and time setting.
6. Camera Resolution: 8MP
7. Video Resolution: 1080P
8. Volume: Short press [Up button]/[Down button] to adjust the volume.
9. Date/Time: Set the date and time of the camera.



## Others

1. Charge: Insert Micro USB cord into the port.  
Red light indicates it is charging and turns off when the battery is full.
2. Standby: When the camera is not in use, it will automatically go to screensaver mode, and then eventually go to standby mode.
3. USB Flash Drive & PC Camera Function:
  - A. Without an SD card, follow these steps:  
Connect USB -- Press the power button --  
Turn on PC -- appears PC camera.
  - B. With SD card inside device, follow these steps:  
Insert SD card - connect USB – Power on -  
SD card appears - Press OK Button – U disk

Insert SD card - connect USB – Power On -  
SD card appears - press Left / Right Button-  
Press OK Button - PC Camera

## Parameter Description

Monitor	2.0 inch
Function	Photo/Video/Game
Lens	1080P/8Mega pixel
Games	1-game
Battery	600mAh
Video format	AVI
Charging time	2.0-2.5hours
Resolution	1080P/720P/VGA
Ext-storage	TF Card,32G
Weight	98g
Charging voltage	DC-5/1A

# Accessories



1. Waterproof camera case

2. USB Cable Charger

3. Handle bar

4. Helmet Pedestal

5. Fixed base mount

6. Fixed base adaptor

7. Waterproof case

base with screw

8. Screw/ Bolt

9. Securing straps

10. User manual

Product Name: Kids Action Camera

Maintenance: This product must not be used in water without the waterproof casing. Keep the camera case and interface dry.

### **Attention!**

The charger is not a toy and should be used under adult supervision during charging.

Please keep it dry and use it according to specifications.

### **Warning!**

It is not suitable for children under 3 years old.

It is best to guide your children when exploring this product.